



**DOUBLE CUP NECKBAND EARMUFF** 

#### Features:

**ADJUSTABLE** 



MOVABLE






# Double CARE Double the SAFE

#### Fitting Instructions:

- 1. Pull the cups outward to position the earmuff into your ears. (picture A)
- 2. Position the ear cups over your ears so that the cushions fully enclose the ears and seal tightly against the head. (picture B)
- 3. Adjust the height of each ear cup until you have a tight and comfortable fit that exerts even pressure around the ears. (picture C)
- 4. Neckband should be behind the neck. For best results, remove all hair under cushion. (picture D)
- 5. Lock the strap with a hook on the top of the head and make it tight. (picture E)
- 6. Noise reduction will be adversely affected by anything that impairs the seal of the earmuffs cushions against the head such as thick spectacle frames, balaclavas, etc. (picture F)

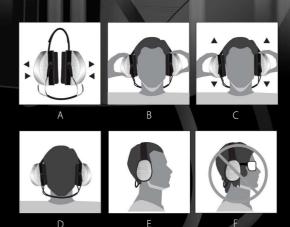

### Perfect for:



















## HIGH PERFORMANCE TECHNOLOGY

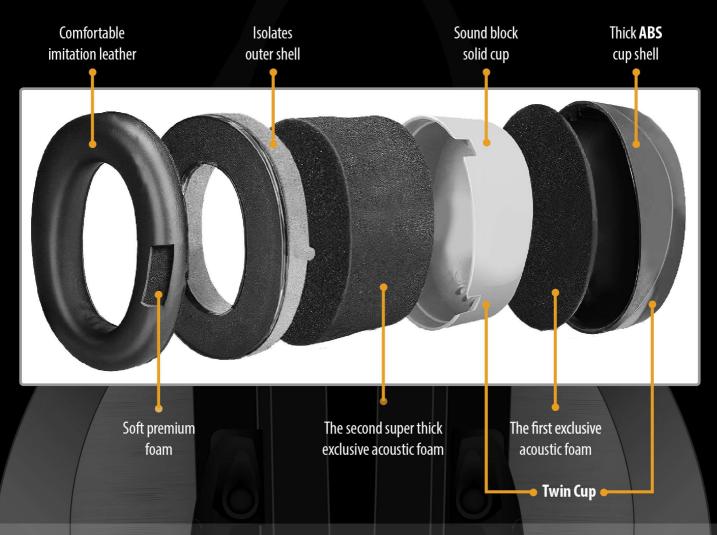

- **SOFL premium Foam** It adds comfort and better seal around your ears.
- Second super thick foam More effective in blocking sound.
- Sound block solid cup Unique outer plastic shell for high performance.
- *Dielectric* Withstands use and abuse, while protecting workers in electrical environments.

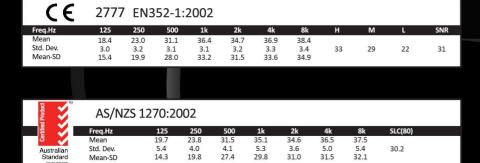





#### **SPECIFICATIONS:**

Earmuff size: 100 x 75 mm Earmuff weight: 250 g

Headband size: 116 ~ 126mm x 175 mm

Product Code: 10252





info@canasafe.com | www.canasafe.com





